

Use the Installation Brackets to install the ProECU-K ECU as shown in the picture below.



*Only with AF-Subharness:* Connect the Power Wire to the Fuse Box location „+12V ignition switched”

